

SUN2000-(50KTL-ZHM3, 50KTL-M3)

Quick Guide

Issue: 05

Part Number: 31500HTB

Date: 2023-05-30

HUAWEI TECHNOLOGIES CO., LTD.




HUAWEI

NOTICE

- Before installing the equipment, read the user manual carefully to get familiar with product information and safety precautions. The product warranty does not cover equipment damage caused by failure to follow the storage, transportation, installation, and usage guidelines specified in this document and the user manual. Log in to the technical support website (<https://support.huawei.com/enterprise>) to view the user manual and safety precautions.
- The information in this document is subject to change without notice. Every effort has been made in the preparation of this document to ensure accuracy of the contents, but all statements, information, and recommendations in this document do not constitute a warranty of any kind, express or implied.
- The **Danger, Warning, Caution, and Notice** statements described in this document do not cover all the safety precautions. You also need to comply with relevant international, national, or regional standards and industry practices.
- Only qualified professionals or trained personnel are allowed to perform operations on the equipment. Operation personnel should understand the system, its working principles, and relevant national/regional standards.
- During operations, use dedicated insulated tools and wear personal protective equipment, such as protective clothing, insulated shoes, goggles, safety helmets, and insulated gloves.

1 Overview

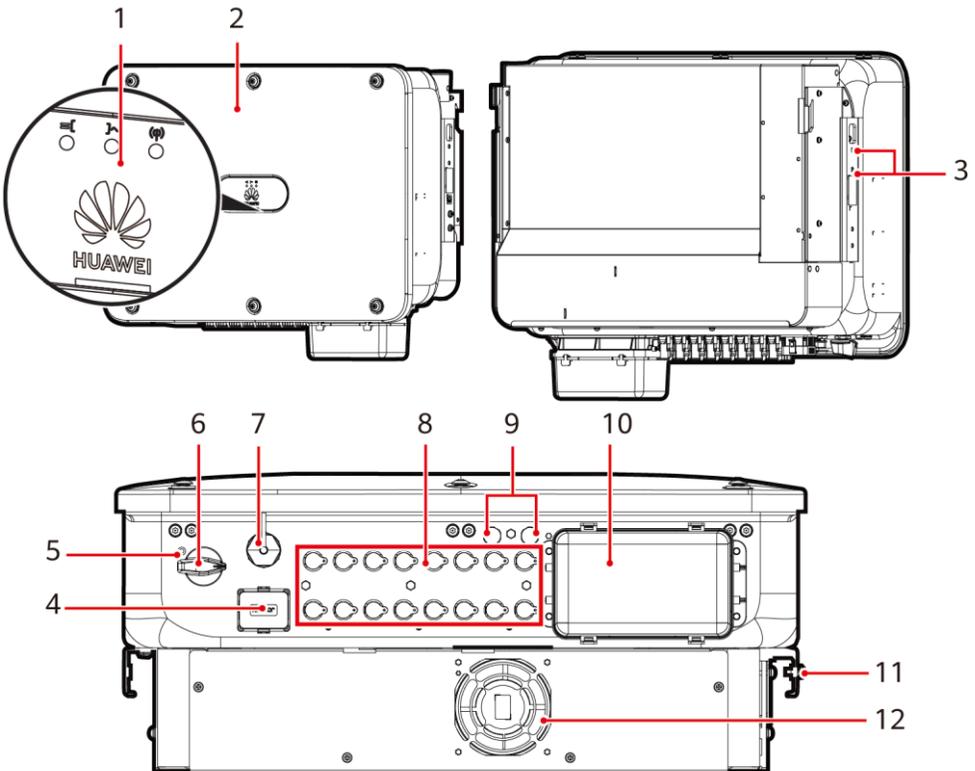

IS13W00011

- (1) LED indicators
- (3) Screws for fixing the awning
- (5) Hole for the DC switch locking screw
- (7) Smart Dongle port (4G/WLAN-FE)
- (9) Ventilation valves
- (11) Ground point


- (2) Host panel
- (4) Communications port (COM)
- (6) DC switch (DC SWITCH)
- (8) DC input terminals (PV1–PV8)
- (10) AC output port
- (12) Fan

2 Installation Requirements


NOTE

If inverters are installed in a place with abundant vegetation, in addition to routine weeding, harden the ground underneath the inverters using cement or gravel (recommended area: 3 m x 2.5 m).

Angle

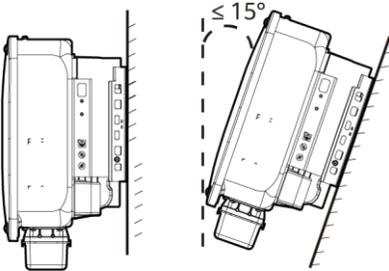


Space

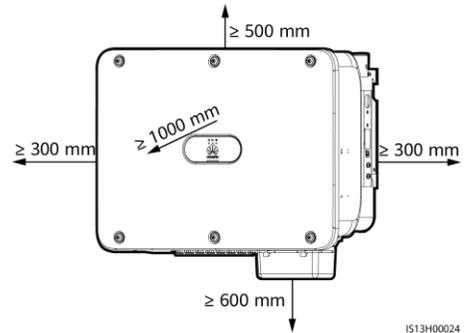

IS13H00024

Dimensions

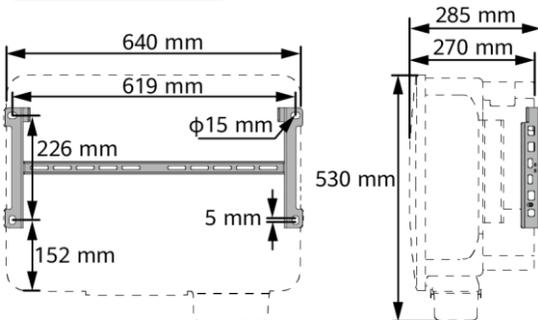

IS17W00006

3 Installing a Solar Inverter


NOTE

- M12x40 bolt assemblies are supplied with the solar inverter. If the bolt length does not meet the installation requirements, prepare M12 bolt assemblies by yourself and use them together with the supplied M12 nuts.
- This quick guide describes how to install a solar inverter on a support. For details about wall-mounted installation, see the user manual.

NOTE


- For models used in Australia, install the DC switch locking screw according to local standards. The DC switch locking screw is delivered with the solar inverter to prevent the solar inverter from being started by mistake.
- Before installing the mounting bracket, remove the security Torx wrench and set it aside.

Position for binding the security Torx wrench

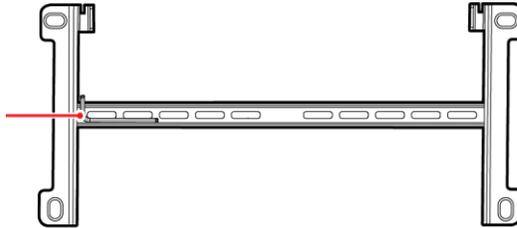


IS13W00006

Moving the Solar Inverter

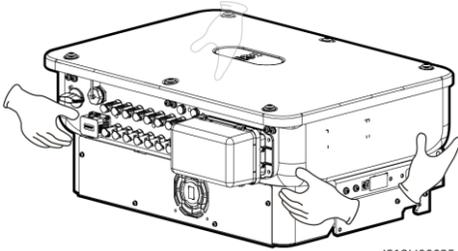




IS13H00025

(Optional) Installing the DC Switch Locking Screw

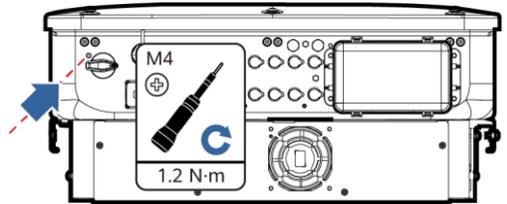

IS13H00027

1. Install the mounting bracket.

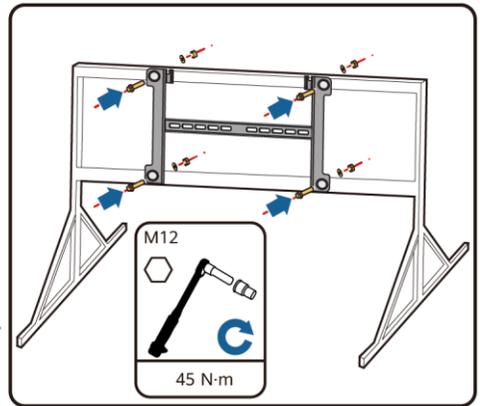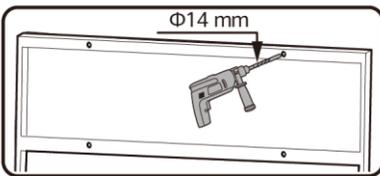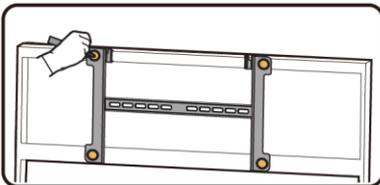


IS13H00008


NOTE

It is recommended that anti-rust measures be taken on the positions for drilling holes.

2. Install the solar inverter onto the mounting bracket.

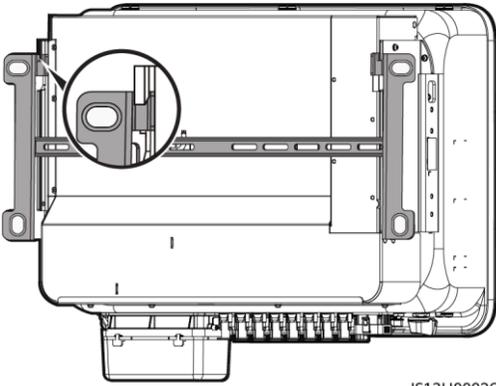

3. Tighten the security Torx screws on both sides.

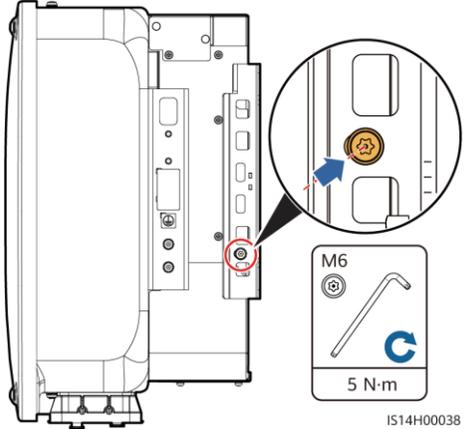

NOTICE

Secure the screws on the sides before connecting cables.

4 Connecting Cables

4.1 Preparations

WARNING

- Do not connect loads between the inverter and the AC switch that directly connects to the inverter. Otherwise, the switch may trip by mistake.
- If an AC switch is used with specifications beyond local standards, regulations, or the Company's recommendations, the switch may fail to turn off in a timely manner in case of exceptions, causing serious faults.

CAUTION

Each inverter must be equipped with an AC output switch. Multiple inverters cannot connect to the same AC output switch.

NOTICE

- To ensure that the inverter can be safely disconnected from the power grid when an exception occurs, connect an AC switch to the AC side of the inverter. Select an appropriate AC switch in accordance with local industry standards and regulations.
- The cable specifications must comply with local standards. Connect cables in accordance with local installation laws and regulations.
- Before connecting cables, ensure that the DC switch of the solar inverter and all the switches connected to it are set to OFF. Otherwise, the high voltage produced by the solar inverter may cause electric shocks.

No.	Cable	Type	Specifications
1	PE cable	Single-core outdoor copper-core cable	Conductor cross-sectional area $\geq 16 \text{ mm}^2$
2	AC output power cable	Outdoor copper-core/aluminum-core cable	<ul style="list-style-type: none"> Conductor cross-sectional area: $25\text{--}50 \text{ mm}^2$ outdoor copper-core cable or $35\text{--}50 \text{ mm}^2$ outdoor aluminum-core cable^a Cable outer diameter: 16–38 mm
3	DC input power cable	Common outdoor PV cable in the industry (recommended model: PV1-F)	<ul style="list-style-type: none"> Conductor cross-sectional area: $4\text{--}6 \text{ mm}^2$ Cable outer diameter: 5.5–9 mm
4	(Optional) RS485 communications cable	Two-core outdoor shielded twisted pair (recommended model: DJYP2VP2-2x2x0.75)	<ul style="list-style-type: none"> Conductor cross-sectional area: $0.2\text{--}1 \text{ mm}^2$ Cable outer diameter: 4–11 mm
5	AC circuit breaker	Recommended: three-phase AC circuit breaker	Rated voltage $\geq 500 \text{ V AC}$ Rated current: 125 A

Note a: Five-core cables with a cross-sectional area of $5 \times 35 \text{ mm}^2$ or $5 \times 50 \text{ mm}^2$ are not supported.


4.2 Connecting a PE Cable

⚠ DANGER

Do not connect the neutral wire to the enclosure as a PE cable. Otherwise, electric shocks may occur.

📖 NOTE

- The PE point at the AC output port is used only as a PE equipotential point, not a substitute for the PE point on the enclosure.
- It is recommended that silica gel or paint be applied around the ground terminal after the PE cable is connected.

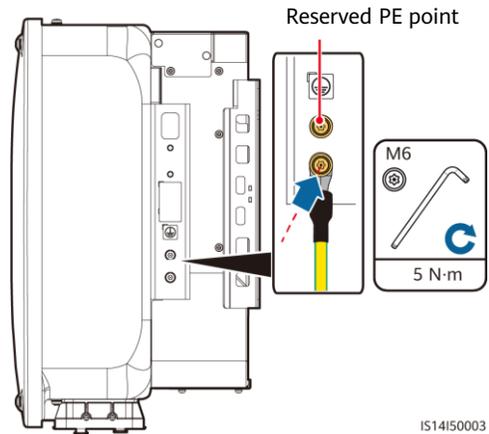


IS14150003

4.3 Installing the AC Output Power Cable

NOTICE


- Use a socket wrench and extension rod to connect the AC power cable. The extension rod must be longer than 100 mm.
- Sufficient slack should be provided in the PE cable to ensure that the last cable bearing the force is the PE cable when the AC output power cable bears pulling force due to force majeure.
- Do not install third-party devices in the AC connection box.
- You need to prepare M8 OT terminals by yourself.

1. Remove the AC terminal box and install partition boards.

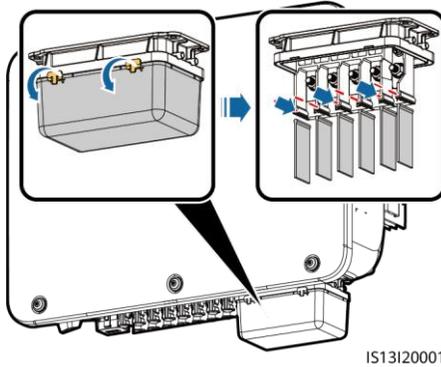

IS13120001


2. Connect the AC output power cable (using a five-core cable as an example).

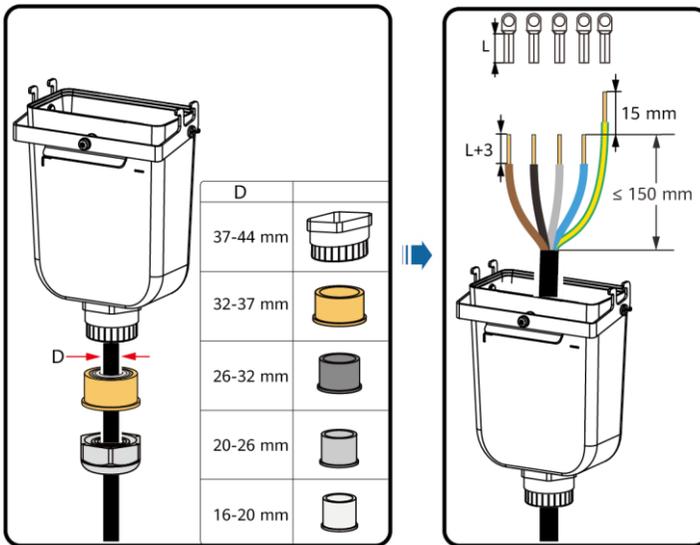

IS13120003

NOTE

- To avoid damaging the rubber liner, do not route a cable with a crimped OT terminal directly through it.
- It is recommended that the length of the PE cable to be stripped be 15 mm longer than the length of other cables.
- The cable colors in figures are for reference only. Select appropriate cables according to the local standards.
- A three-core AC output power cable can be connected similarly. The three-core cable (L1, L2, and L3) is not connected to the neutral wire or PE wire.
- A four-core or five-core AC output power cable can be connected similarly. The four-core cable (L1, L2, L3, and PE) is not connected to the N wire, and the four-core cable (L1, L2, L3, and N) is not connected to the PE wire.

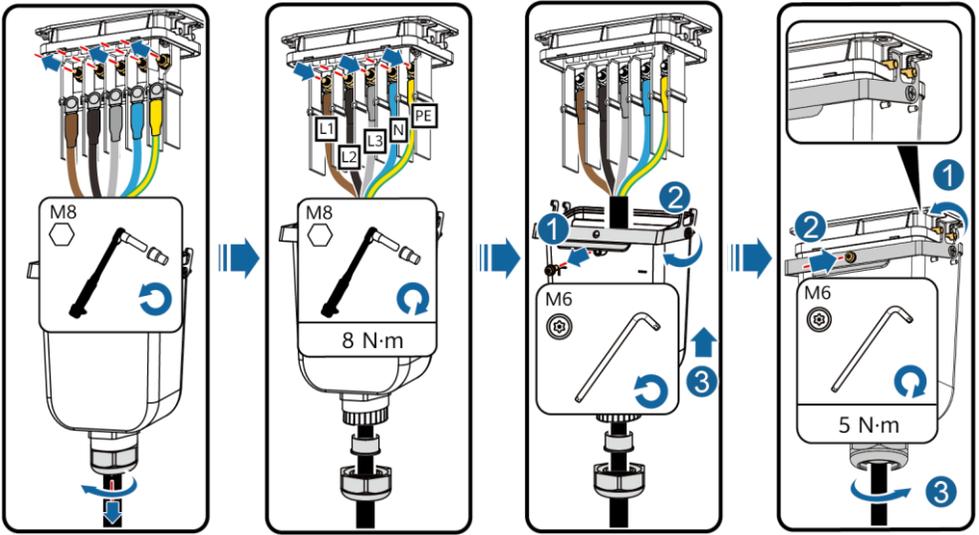

IS13120002

4.4 Installing DC Input Power Cables

NOTICE

When the DC input is not fully configured, the DC input terminals must meet the following requirements:

- Evenly distribute DC input power cables to the four MPPTs. MPPT 1 and MPPT 4 are preferred.
- Maximize the number of connected MPPTs.

Number of PV Inputs	Terminal Selection	Number of PV Inputs	Terminal Selection
1	PV1	2	PV1, PV7
3	PV1, PV3, PV7	4	PV1, PV3, PV5, PV7
5	PV1, PV2, PV3, PV5, PV7	6	PV1, PV2, PV3, PV5, PV7, PV8
7	PV1, PV2, PV3, PV4, PV5, PV7, PV8	8	PV1, PV2, PV3, PV4, PV5, PV6, PV7, PV8


NOTICE

- Use the positive and negative Amphenol Helios H4 metal terminals and DC connectors supplied with the solar inverter. Using incompatible positive and negative metal terminals and DC connectors may result in serious consequences. The caused device damage is not covered under any warranty.
- You are advised to use the H4TC0003 (Amphenol) crimping tool and do not use it with the positioning block. Otherwise, the metal terminals may be damaged. The H4TW0001 (Amphenol) open-end wrench is recommended.
- Ensure that the PV module output is well insulated to ground.
- The DC input voltage of the SUN2000 shall not exceed 1100 V DC under any circumstance.

NOTICE

- Before installing DC input power cables, label the cable polarities to ensure correct cable connections.
- If a DC input power cable is reversely connected and the DC switch is turned on, do not operate on the DC switch or the positive/negative connectors immediately. Otherwise, the device may be damaged. The caused device damage is not covered under any warranty. Wait until the night when solar irradiance declines and the PV string current drops to below 0.5 A. Then set the DC switch to the OFF position, remove the positive and negative connectors, and correct the polarity of the DC input power cable.

1. Connect the DC power cables.

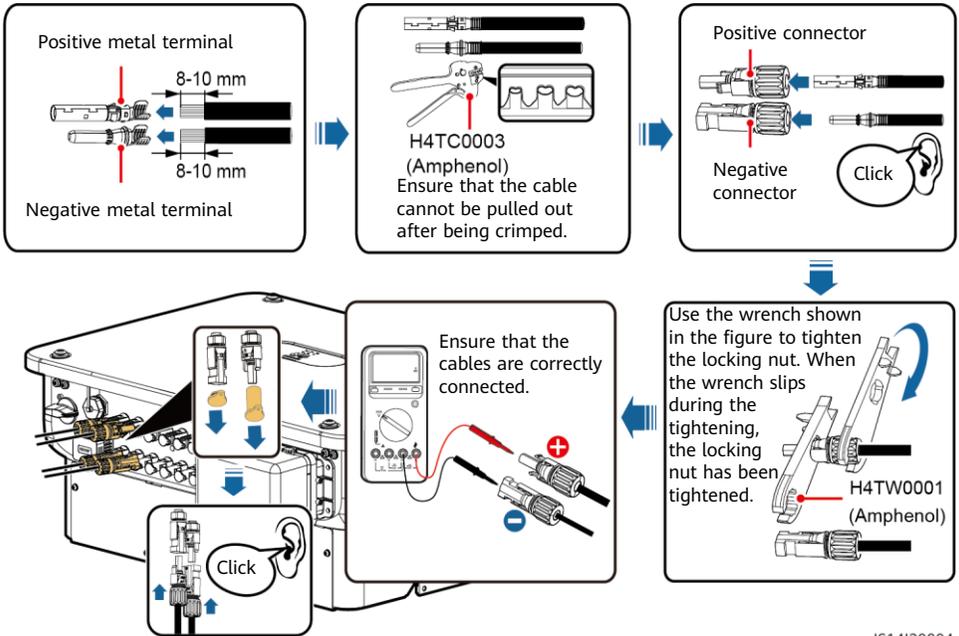


IS14I30004

4.5 (Optional) Installing the Smart Dongle

NOTICE

- The Smart Dongle is not provided in standard configuration.
- For details about how to install the Smart Dongle, see the Smart Dongle quick guide of the corresponding model. The quick guide is delivered with the Smart Dongle.

Smart Dongle port (4G/WLAN-FE)

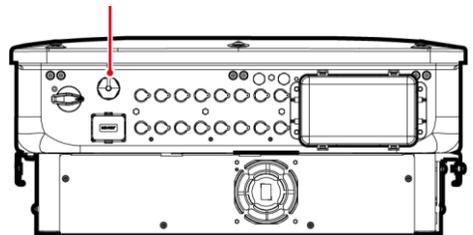


IS13H00027

4.6 Installing the Signal Cable

NOTICE

- When laying out the signal cable, separate it from the power cable and keep it away from strong interference sources to avoid strong communication interference.
- Ensure that the protective layer of the cable is inside the connector, that excess core wires are cut off from the protection layer, that the exposed core wire is totally inserted into the cable hole, and that the cable is connected securely.

COM Port Pin Definitions

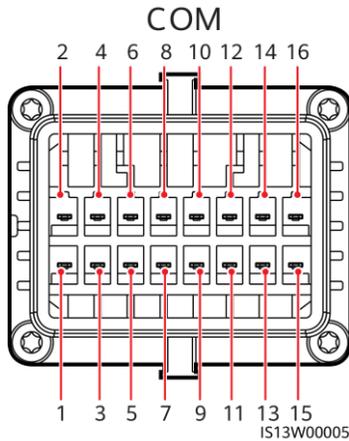


No.	Definition	Function	Description	No.	Definition	Function	Description
1	485A1-1	RS485 differential signal +	Used to cascade inverters or connect to the SmartLogger.	2	485A1-2	RS485 differential signal +	Used to cascade inverters or connect to the SmartLogger.
3	485B1-1	RS485 differential signal -		4	485B1-2	RS485 differential signal -	
5	PE	Ground point on the shield layer	-	6	PE	Ground point on the shield layer	-
7	485A2	RS485 differential signal +	Connects to the RS485 signal port on the power grid scheduling power meter.	8	DIN1	Dry contact for power grid scheduling	-
9	485B2	RS485 differential signal -		10	DIN2		
11	-	-	-	12	DIN3		
13	GND	GND	-	14	DIN4		
15	DIN5	Rapid shutdown/NS protection/OVGR	Supports functions such as rapid shutdown, NS protection, and OVGR.	16	GND		

Scenarios Where No Signal Cable Is Connected

NOTICE


If no signal cable is required for the SUN2000, use waterproof plugs to block the wiring holes on the signal cable connector and connect the signal cable connector to the communications port on the SUN2000 to improve the waterproof performance of the SUN2000.

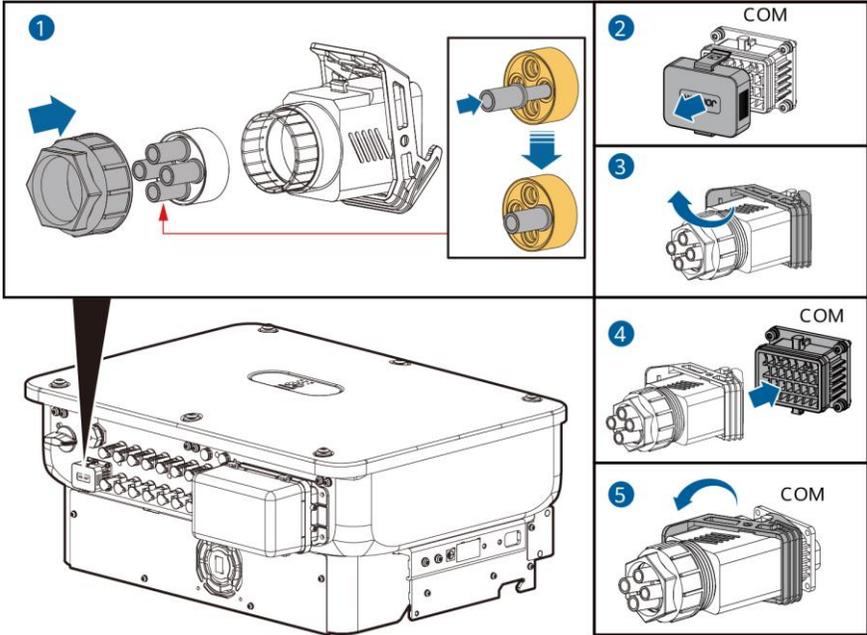

IS14140009

(Optional) Connecting the Signal Cable

1. Connect the signal cable to the signal connector.

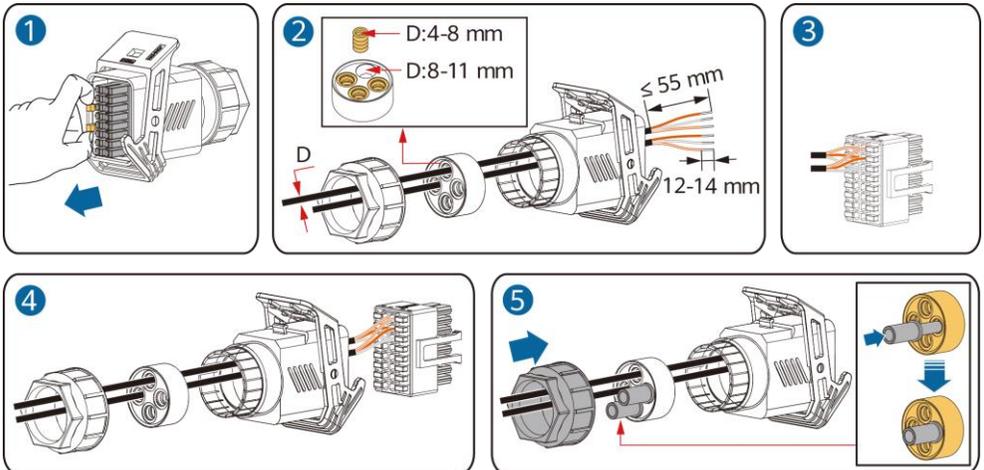


IS13140002


- Connect the RS485 communications cable to the solar inverter.

NOTICE


If two or more solar inverters are cascaded, install the RS485 communications cable.

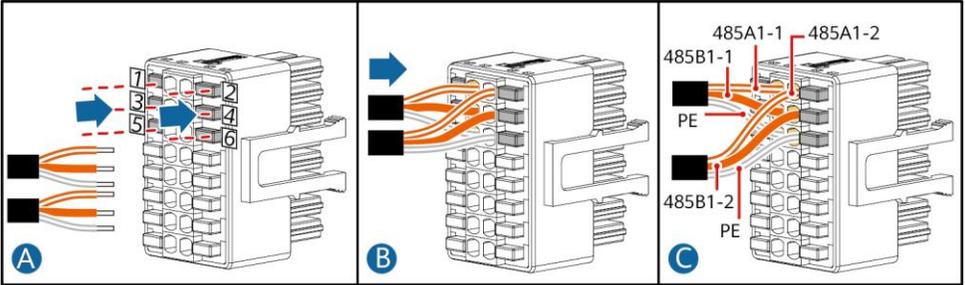


- Connect the RS485 communications cable to the power meter.

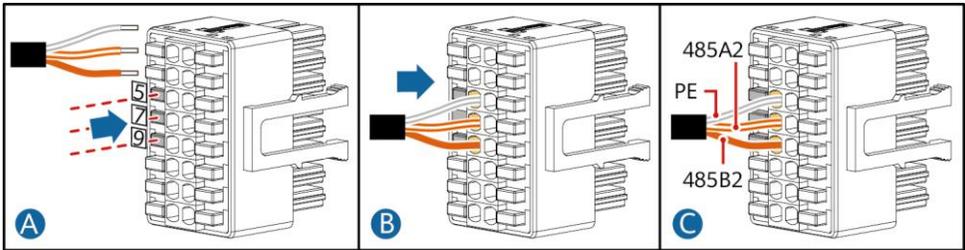


- Connect the power grid scheduling signal cable.

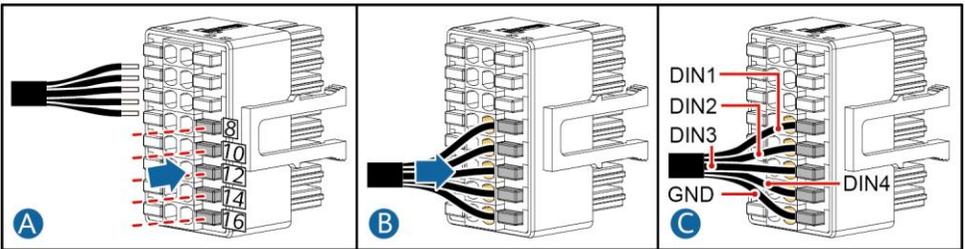


- Connect the rapid shutdown signal cable.

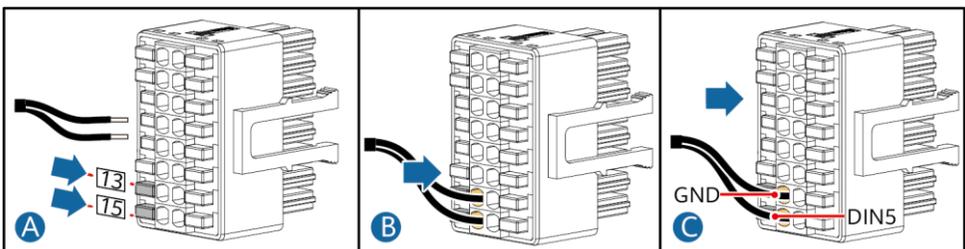

2. Connect the signal cable connector to the communications port.

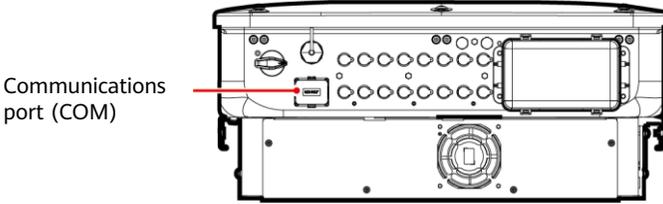

IS13H00027

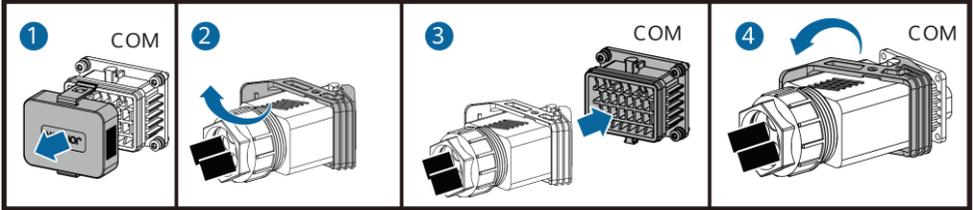

IS13I40001

5 Verifying the Installation


No.	Acceptance Criteria
1	The solar inverter is installed correctly and securely.
2	The cables are routed properly as required by the customer.
3	The communications expansion module is installed correctly and securely.
4	Cable ties are evenly distributed and no burr exists.
5	The PE cable is connected correctly and securely.
6	The DC switch and all the switches connected to the solar inverter are set to the OFF position.
7	The AC output power cable, DC input power cables, and signal cable are connected correctly and securely.
8	Unused terminals and ports are locked by watertight caps.
9	The installation space is proper, and the installation environment is clean and tidy.

6 System Power-On

NOTICE

Before turning on the AC switch between the solar inverter and the power grid, check that the AC voltage is within the specified range using a multimeter set to the AC position.

1. Turn on the AC switch between the solar inverter and the power grid.
2. (Optional) Remove the locking screw beside the DC switch. Store the screws properly for future power-off maintenance.

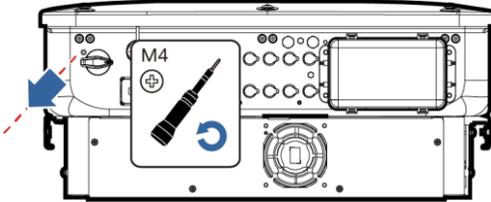

IS17H00008

3. Turn on the DC switch at the bottom of the solar inverter.
4. Observe the LED indicators to check the operating status of the solar inverter.

Category	Status (Blinking Slowly: On for 1s and then Off for 1s; Blinking Fast: On for 0.2s and then Off for 0.2s)		Description
Running indicator			-
	Steady green	Steady green	The solar inverter is operating in grid-tied mode.
	Blinking green slowly	Off	The DC is on and the AC is off.
	Blinking green slowly	Blinking green slowly	Both the DC and AC are on, and the solar inverter is not supplying power to the power grid.
	Off	Blinking green slowly	The DC is off and the AC is on.
	Off	Off	Both the DC and AC are off.
	Blinking red fast	-	DC environment alarm
	-	Blinking red fast	AC environment alarm
Communications indicator			-
	Blinking green fast		Communication is in progress.
	Blinking green slowly		Mobile phone access
	Off		No communication

Note: If LED1, LED2, and LED3 are steady red, the solar inverter is faulty and needs to be replaced.

7 System Commissioning

NOTE

- If the solar inverter is connected to the FusionSolar smart PV management system, the FusionSolar app is recommended. In areas where the FusionSolar app is not available, or when a third-party management system is used, only the SUN2000 app can be used for commissioning.
- Access the Huawei app store (<http://appstore.huawei.com>), search for FusionSolar or SUN2000, and download the app installation package. You can also scan the QR codes below to download the apps.



FusionSolar



SUN2000 (Android)



SUN2000 (iOS)

NOTICE

- The screenshots are for reference only. The actual screens may vary.
- Obtain the initial password for connecting to the solar inverter WLAN from the label on the side of the solar inverter.
- Set the password at the first login. To ensure account security, change the password periodically and keep the new password in mind. Not changing the password may cause password disclosure. A password left unchanged for a long period of time may be stolen or cracked. If a password is lost, devices cannot be accessed. In these cases, the user is liable for any loss caused to the PV plant.
- Set the correct grid code based on the application area and scenario of the solar inverter.

7.1 Scenario in Which Solar Inverters Are Connected to the FusionSolar Smart PV Management System

1. (Optional) Register an installer account.

NOTE

If you already have an installer account, skip this step.

- Create the first installer account will generate a domain named after the company.

The first screenshot shows the FusionSolar login screen. It has a header with 'English' and a menu icon. Below is the FusionSolar logo. There are input fields for 'Username or email' and 'Password'. A 'No account?' link is highlighted with a red box and a hand icon. A 'Log In' button is at the bottom, and a 'Demo site' link is below it.

The second screenshot is the 'Select role' screen. It has a back arrow and the title 'Select role'. There are two options: 'I'm an owner' and 'I'm an installer'. The 'I'm an installer' option is highlighted with a red box and a hand icon. Below it is a 'Register' button.



The third screenshot is the 'Installer Registration' form. It has a back arrow and the title 'Installer Registration'. There is a note: 'If your company has been registered as an installer in the system, request your company administrator to add you to the company.' Below are several input fields: 'Company name', 'Please select a country/region', 'Enter an email address.', 'Enter your username.', 'Enter the password.', 'Confirm password', and 'Enter the verification code.' There is a 'Send Code' link next to the verification code field. At the bottom, there is a checkbox for 'I agree to the Terms of Use and I have read the Privacy Policy.' and a 'Register' button highlighted with a hand icon.

- To create multiple installer accounts for a company, log in to the FusionSolar app and tap **Add User** to create installer accounts.

The first screenshot is the 'Plants' screen. It has a header with 'Plants' and 'Statistics'. Below is a 'Setup wizard' section with 'Add user' highlighted by a hand icon. There are four status buttons: '106 All', '66 Normal', 'Faulty', and '36 Offline'. Below is a search bar 'Enter a plant name.' and a bottom navigation bar with 'Home', 'Maintenance', 'Devices', and 'Me'.

The second screenshot is the 'Add user' form. It has a back arrow and the title 'Add user'. There are several input fields: '*Service provider', '*Role', '*Associated Plants', '*Username', 'Avatar', 'Country/Region code', 'Mobile number', and '*Email'. There is a checkbox for 'I have obtained the owner's authorization.' Below the form is a 'Cancel' button and a 'Save' button highlighted with a hand icon.

2. Create a PV plant and a plant owner.

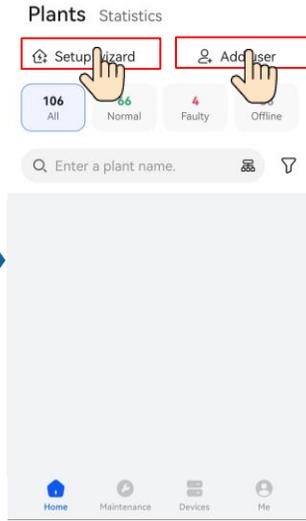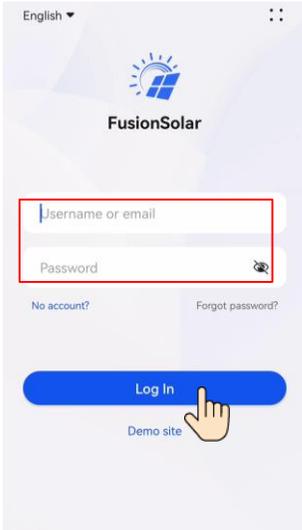


NOTE

- In the quick settings for SUN2000-50KTL-M3, the grid code is N/A by default (automatic startup is not supported). Set the grid code based on the area where the PV plant is located.
- For details, see the *FusionSolar App Quick Guide*. You can scan the QR code to download the quick guide.



7.2 Scenario in Which Solar Inverters Are Connected to Other Management Systems

1. Open the SUN2000 app, scan the QR code of the solar inverter or manually connect to the WLAN hotspot to access the device commissioning screen.
2. Select **installer** and enter the login password.
3. Tap **Log in** to access the quick settings screen or solar inverter home screen.

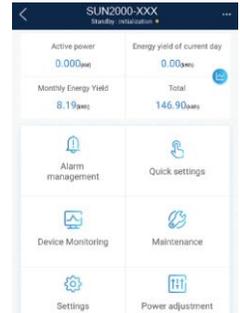

NOTE

For details, see the *FusionSolar App Quick Guide*.



8 FAQ: How Do I Reset the Password?

1. Check that the AC and DC power supplies to the solar inverter are connected simultaneously, and that the  and  indicators are steady green or blink slowly for more than 3 minutes.
2. Turn off the AC switch, set the DC switch at the bottom of the solar inverter to OFF, and wait until all indicators on the solar inverter panel turn off.
3. Complete the following operations within 4 minutes:
 - a. Turn on the AC switch and wait for about 90s or until the inverter indicator  blinks.
 - b. Turn off the AC switch and wait about 30s or until all LED indicators on the inverter panel turn off.
 - c. Turn on the AC switch and wait for about 30s or until all LED indicators on the inverter panel blink and then turn off after about 30s.
4. Wait until the three indicators on the inverter panel blink green quickly and then blink red quickly, indicating that the password has been restored.
5. Reset the password within 10 minutes. (If no operation is performed within 10 minutes, all parameters of the solar inverter remain the same as those before the reset.)
 - a. Wait until the  indicator blinks.
 - b. Obtain the initial WLAN hotspot name (SSID) and initial password (PSW) from the label on the side of the solar inverter to connect to the app.
 - c. On the login page, set a new login password and log in to the app.

NOTICE

You are advised to reset the password in the morning or at night when the solar irradiance is low.

Huawei Technologies Co., Ltd.
Huawei Industrial Base, Bantian, Longgang
Shenzhen 518129 People's Republic of China
e.huawei.com